4. Exploded Views and Parts List

4-1 Indoor Unit

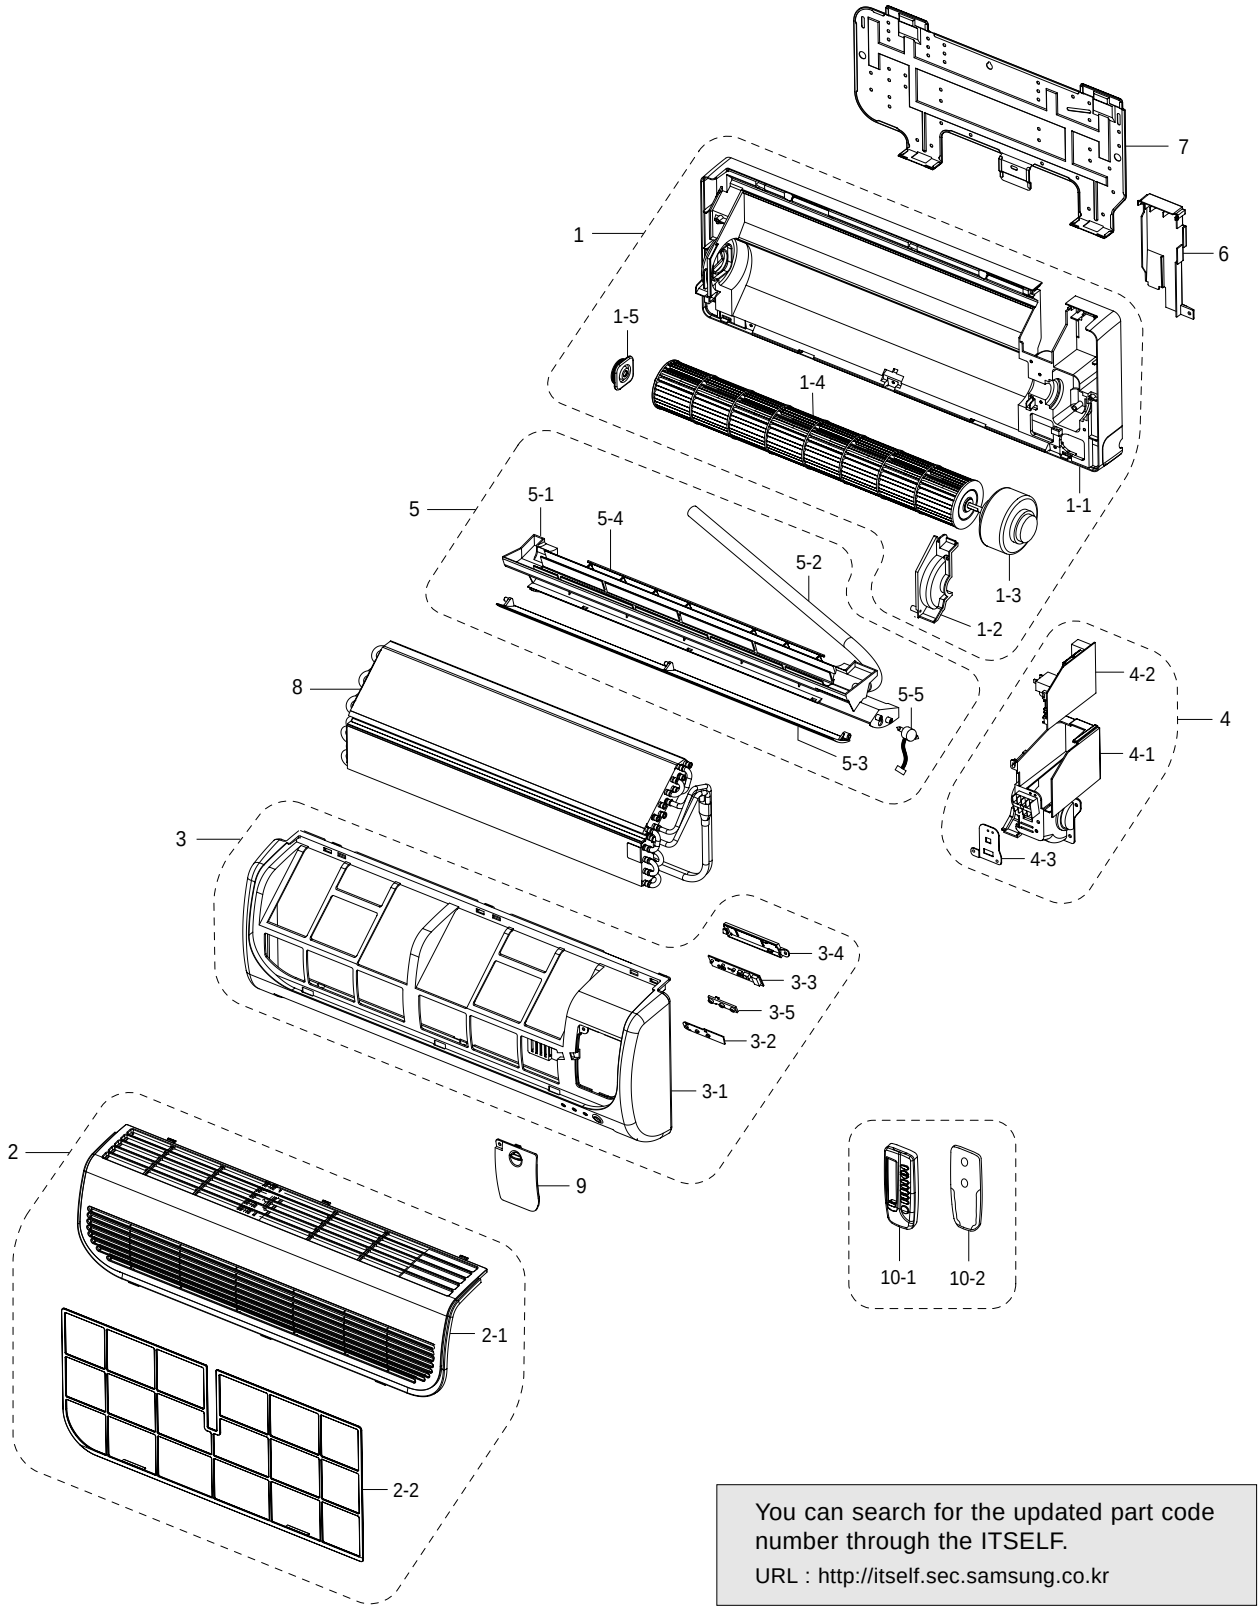

You can search for the updated part code number through the ITSELF.

URL : http://itself.sec.samsung.co.kr

■ **Parts List**

No.	Code No.	Description	Specification	Q'TY		
				SH05ZZ8 SH07ZZ8	SC05ZZ8	AS05(07)Z1AZD
1	DB94-00434A	ASS'Y BACK BODY	ASS'Y	1	1	1
1-1	DB61-01660A	BACK BODY	HIPS	1	1	1
1-2	DB61-01655A	HOLDER MOTOR	PP(V0)	1	1	1
1-3	DB31-00152A	MOTOR FAN IN	ASS'Y	1	1	1
1-4	DB94-00436A	CROSS FAN	ASS'Y	1	1	1
1-5	DB94-00258A	RUBBER BERARING	RUBBER	1	1	1
2	DB92-00527A	ASS'Y GRILLE	ASS'Y	1	1	1
2-1	DB64-01005A	GRILLE AIR INLET	HIPS	1	1	1
2-2	DB63-00870A	GUARD AIR FILTER	PP	1	1	-
	DB63-00870B	GUARD AIR FILTER	PP	-	-	1
3	DB92-00528A	ASS'Y PANEL FRONT	ASS'Y	1	1	1
3-1	DB64-01004A	PANEL FRONT	HIPS	1	1	1
3-2	DB63-00866A	COVER DISPLAY	PC	1	1	1
3-3	DB93-02534A	ASS'Y DISPLAY PCB	ASS'Y	1	1	1
3-4	DB63-00865A	COVER DISPLAY PCB	HIPS	1	1	1
3-5	DB61-01657A	HOLDER LED	HIPS	1	1	1
4	DB93-02513A	ASS'Y CONTROL IN	ASS'Y	1	-	-
	DB93-02513B	ASS'Y CONTROL IN	ASS'Y	-	1	1
4-1	DB61-01656A	HOLDER CONTROL	HIPS(V0)	1	1	1
4-2	DB93-02617A	ASS'Y MAIN PCB	ASS'Y	1	-	-
	DB93-02617B	ASS'Y MAIN PCB	ASS'Y	-	1	1
4-3	DB62-01661A	HOLDER CLAMP IN	SGCC-M	1	1	1
5	DB94-00314A	ASS'Y TRAY DRAIN	ASS'Y	1	1	1
5-1	DB63-00869A	TRAY DRAIN	ABS	1	1	1
5-2	DB94-00315Q	DRAIN HOSE	ASS'Y	1	1	1
5-3	DB66-00606A	BLADE-H	HIPS	1	1	1
5-4	DB66-00605A	BLADE-V	PP	1	1	1
5-5	DB95-20138A	MOTOR STEPPING	ASS'Y	1	1	1
6	DB61-01658A	HOLDER PIPE	HIPS	1	1	1
7	DB70-00426A	PLATE HANGER	SGCC-M	1	1	1
8	DB96-03063A	ASS'Y EVAP UNIT	ASS'Y	1	1	1
9	DB63-00867A	COVER TERMINAL	HIPS(V0)	1	1	1
10-1	DB93-01364B	REMOCON	ASS'Y	1	-	-
	DB93-01364A	REMOCON	ASS'Y	-	1	1
10-2	DB61-00204A	REMOCON HOLDER	HIPS	1	1	1

4-2 Outdoor Unit

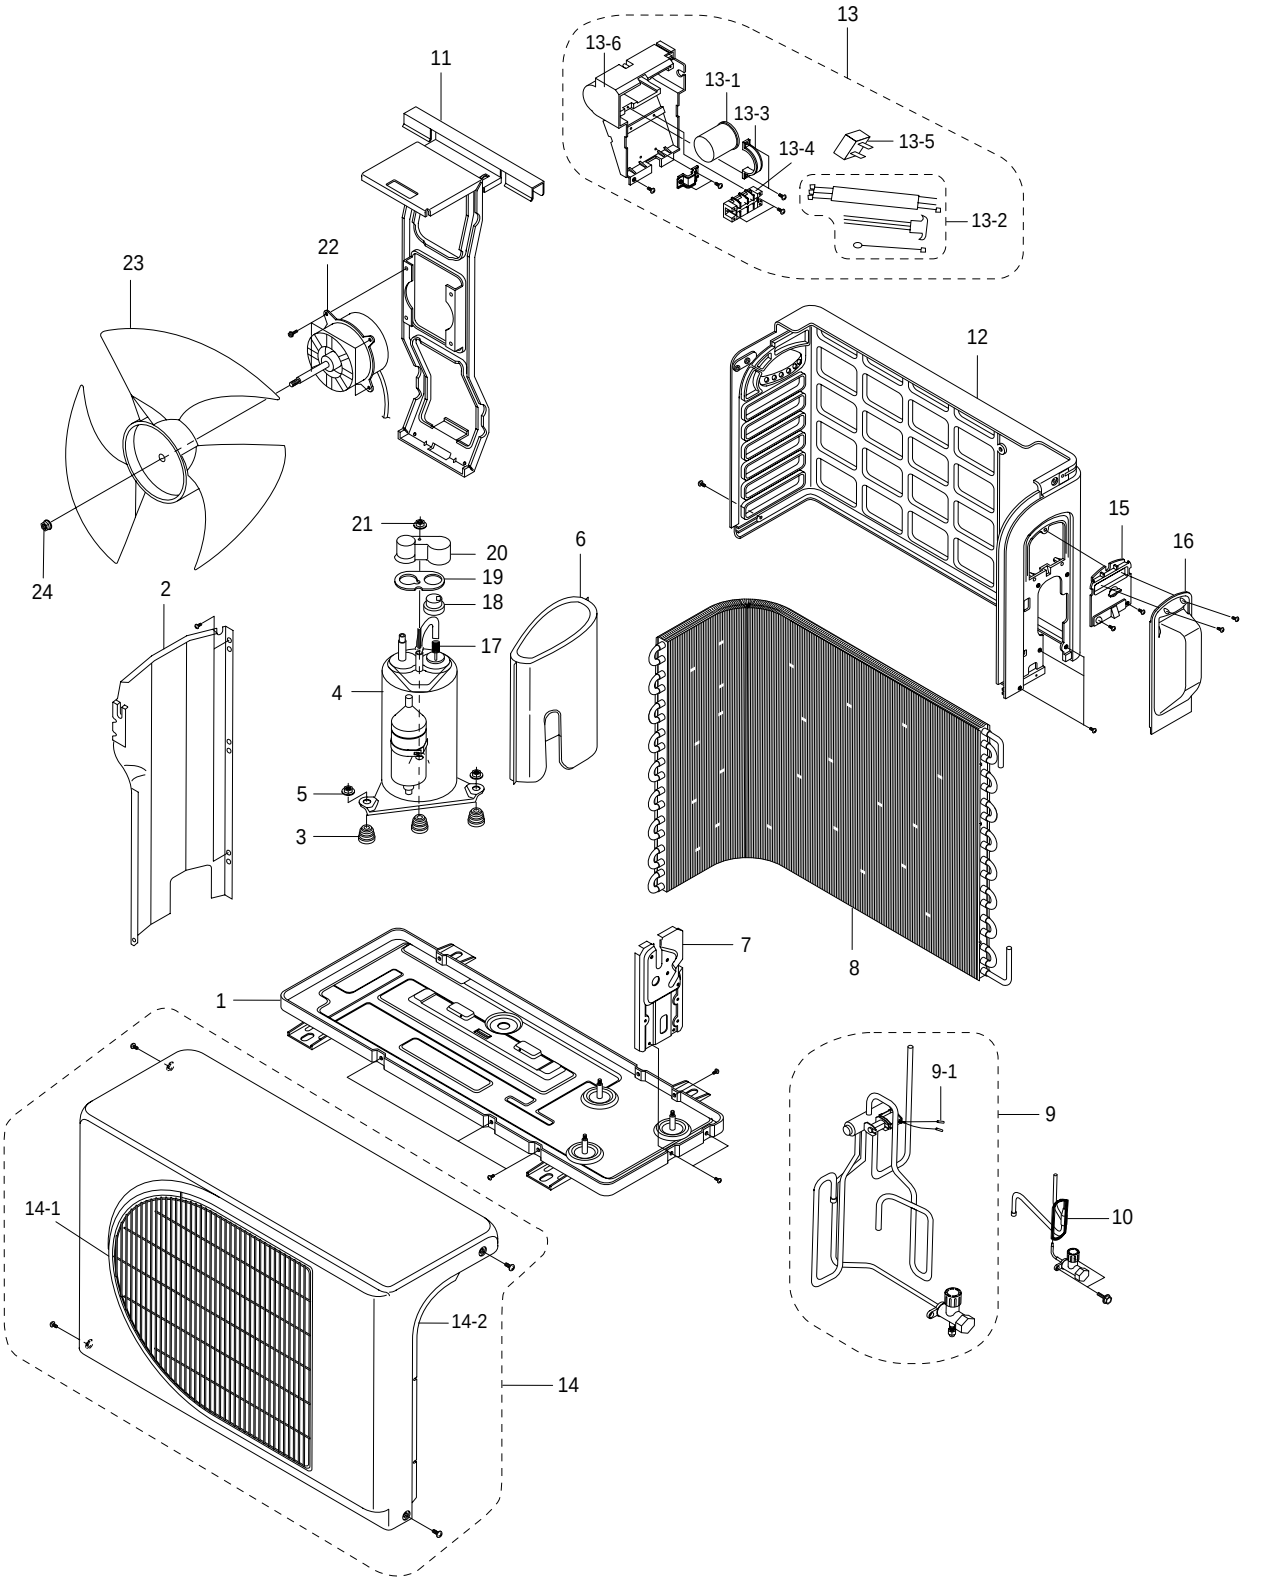

■ **Parts List**

No.	Code No.	Description	Q'TY				
			SH05ZZ8X	SH07ZZ8X	SC05ZZ8X	AS05Z1AZDX	AS07Z1AZDX
1	DB90-01241A	ASS'Y BASE OUT	1	-	1	1	-
	DB90-01241B	ASS'Y BASE OUT	-	1	-	-	1
2	DB94-00045B	ASS'Y PARTITION	1	1	1	1	1
3	DB73-00070A	GROMMET ISLOATOR	1	-	1	1	-
	DB63-00930A	GROMMET ISLOATOR	-	1	-	-	1
4	DB95-00094H	ROTARY COMP	1	-	1	-	-
	DB95-00476A	ROTARY COMP	-	1	-	-	1
	DB95-00532A	ROTARY COMP	-	-	-	1	-
5	DB60-30028A	NUT WASHER	1	1	1	1	1
6	DB72-00727A	CLOTH COMP SOUND	1	1	1	1	1
7	DB61-00168A	BRAKET VALVE	1	1	1	1	1
8	DB96-02994A	ASS'Y CONDENSER	1	-	-	-	-
	DB96-02994B	ASS'Y CONDENSER	-	1	-	-	-
	DB96-02994C	ASS'Y CONDENSER	-	-	1	1	1
9	DB99-00398A	ASS'Y 4WAY VALVE	1	-	-	-	-
	DB99-00379A	ASS'Y 4WAY VALVE	-	1	-	-	-
9-1	DB33-00002A	ASS'Y SOLENOID COIL	1	1	-	-	-
10	DB96-02989B	ASS'Y TUBE CAPILLARY	1	-	1	-	-
	DB96-02989A	ASS'Y TUBE CAPILLARY	-	1	-	-	-
	DB96-02989E	ASS'Y TUBE CAPILLARY	-	-	-	1	1
11	DB90-01287A	ASS'Y BRACKET MOTOR	1	1	1	1	1
12	DB90-00109B	ASS'Y CABI SIDE	1	1	1	1	1
13	DB93-02608A	ASS'Y CONTROL OUT	-	-	1	-	-
	DB93-02565A	ASS'Y CONTROL OUT	-	1	-	-	-
	DB93-02565B	ASS'Y CONTROL OUT	1	-	-	-	-
	DB93-02608B	ASS'Y CONTROL OUT	-	-	-	-	1
	DB93-02608C	ASS'Y CONTROL OUT	-	-	-	1	-
13-1	2501-001235	C OIL	1	-	1	-	-
	2501-001234	C OIL	-	1	-	1	1
13-2	DB93-00481A	ASS'Y LEAD WIRE	1	1	1	1	1
13-3	DB61-00172A	HOLDER CAPACITOR	1	1	1	1	1
13-4	DB65-40049E	TERMINAL BLOCK	1	1	1	1	1
13-5	2301-001375	C FILM	1	1	1	1	1
13-6	DB61-00170A	CASE CONTROL OUT	1	1	1	1	1
14	DB90-00109B	ASS'Y CABI FRONT	1	1	1	1	1
14-1	DB63-00099A	GUARD FAN WIRE	1	1	1	1	1
14-2	DB64-00086A	CABINET FRONT	1	1	1	1	1
15	DB90-00152A	ASS'Y COVER CONTROL	1	1	1	1	1
16	DB94-00021A	ASS'Y COVER VALVE	1	1	1	1	1
17	DB67-60020A	SPRING OLP	1	-	1	1	-
	DB61-01764A	SPRING OLP	-	1	-	-	1
18	DB35-00020F	PROTECTOR O/P	1	-	1	1	-
	DB35-00027A	PROTECTOR O/P	-	1	-	-	1
19	DB63-20002A	GASKET	1	-	1	1	-
	DB63-00931A	GASKET	-	1	-	-	1
20	DB63-10165D	COVER TERMINAL	1	-	1	1	-
	DB63-00928A	COVER TERMINAL	-	1	-	-	1
21	DB60-30018A	NUT FLANGE	1	-	1	1	-
	DB63-00968A	NUT FLANGE	-	1	-	-	1
22	DB31-00034A	MOTOR FAN OUT	1	1	1	1	1
23	DB67-00036A	FAN PROPELLER	1	1	1	1	1
24	DB60-30020A	NUT FLANGE	1	1	1	1	1

4-3 Ass'y-Control In

■ **DB93-02513A : SH05ZZ8/SH07ZZ8**
DB93-02513B : SC05ZZ8
DB93-02513C : AS05Z1AZD/AS07Z1AZD

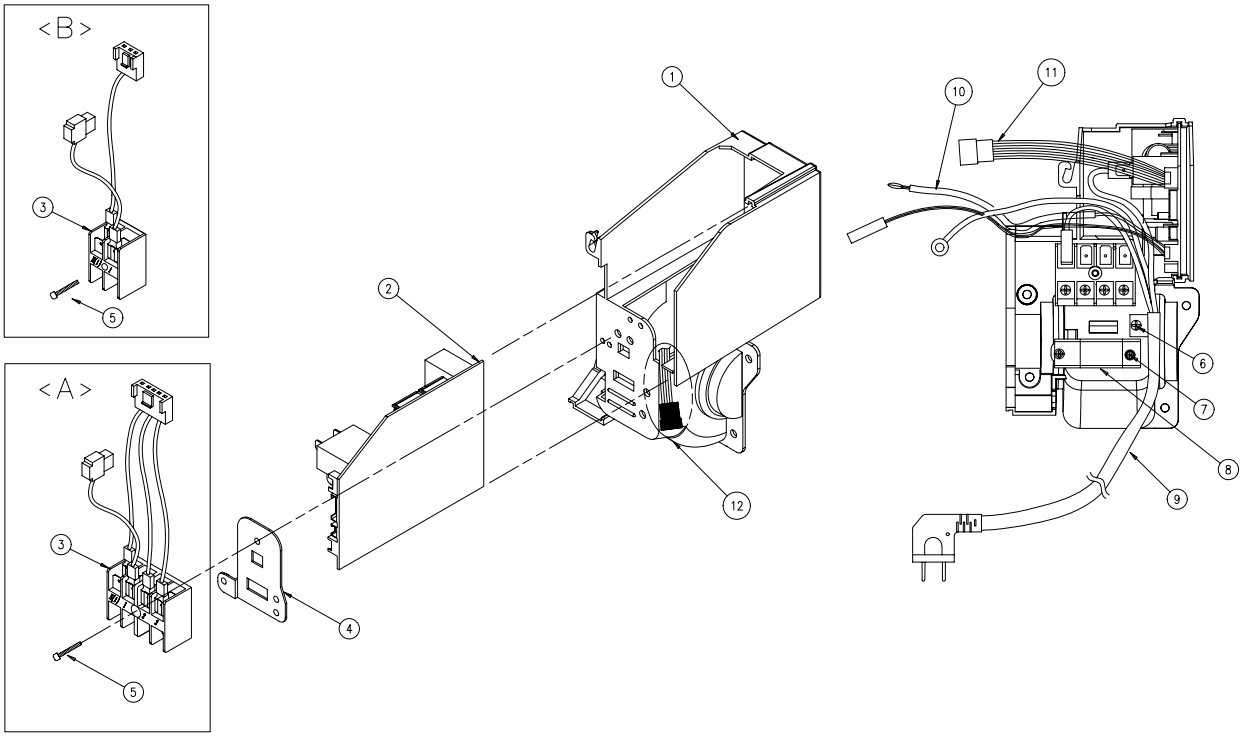

■ **Parts List**

No.	Code No.			Description	Specification	Q'TY
	DB93-02513A	DB93-02513B	DB93-02513C			
	"A"Part	"B"Part	"B"Part			
1	DB61-01656A	DB61-01656A	DB61-01656A	CASE-CONTROL	HIPS	1
2	DB93-02617A	DB93-02617B	DB93-02617B	ASS'Y MAIN PCB	ASS'Y	1
3	DB93-02508A	DB93-02507A	DB93-02507A	ASS'Y TERMINAL BLOCK	ASS'Y	1
4	DB61-01661A	DB61-01661A	DB61-01661A	HOLDER CLAMP IN	SGCC-M T1.0	1
5	6001-000929	6001-000929	6001-000929	SCREW-MACHINE	PH M3xL22	1
6	6001-001054	6001-001054	6001-001054	SCREW-MACHINE	TH M4xL10	1
7	6001-000725	6001-000725	6001-000725	SCREW-MACHINE	TH M4xL16	2
8	DB61-00171A	DB61-00171A	DB61-00171A	CLAMP WIRE	ABS	1
9	3903-000095	3903-000095	DB93-01631A	POWER CORD	UCP2/KP2	1
10	DB32-00020A	DB32-00020A	DB32-00020A	ASS'Y-THERMISTOR	ASS'Y	1
11	DB93-02498A	DB93-02498A	DB93-02498A	ASS'Y-C/W SUB(MAIN)	ASS'Y	1
12	DB39-00147D	DB39-00147D	DB39-00147D	CONNECTOR PCB U/D	ASS'Y	1